

# Egress Exit Surface/Suspended Installation Leaflet



Feb 2021 - Rev A




## Whitecroft Lighting Limited


Burlington Street, Ashton-under-Lyne, Lancashire OL7 0AX Telephone +44 (0)161 330 6811 Facsimile: +44 (0)161 331 5855

Registered No. 3848973 England

Registered Office: As above

## Mounting Instructions

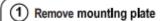

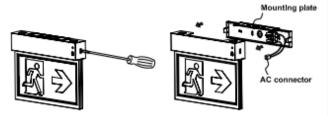

- Insert flat screwdriver into slot on side of unit, pry off and remove the mounting plate from unit.

  (b) Disconnect AC connector from PCBA.


#### Wall mounting or Ceiling mounting



- Knock out appropriate center cable entry hole and mounting screw hole on the mounting plate.
- B Route AC supply wire through center hole of mounting plate.
- © Fix mounting plate on the mount surface with screws and anchor nuts.

#### Wiring connection

Sultable cable 0.75-2.5mm<sup>2</sup>

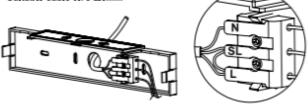

Connect the AC supply wire to terminal block. Refer to wiring Instruction showed below.

#### (4) Connect battery

Battery connector



Connect battery male and female connector inside of mounting bracket.

#### Change pictogram when necessary



Remove the pictogram on the unit, select other pictogram you need then insert into slot of panel.


#### (6) Finish installation



Snap AC supply on PCBA and then snap fixture to mounting

## Wiring Instructions

#### Maintained Wiring

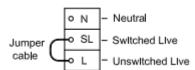


Maintained (default operation):

Connect L,N and leave jumper cable connected.

For switched maintained operation, disconnect the jumper cable and connect a switched live to 'SL' terminal.

#### Non-Maintained Wiring

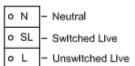

Non-maintained: Connect L,N and remove jumper cable.

## Mounting Options


Wall mounting

Ceiling mounting





## Mounting Instructions

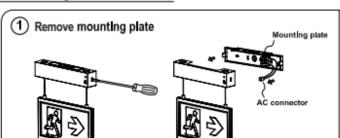

- Insert flat screwdriver into slot on side of unit, pry off and remove the mounting plate from unit.

  (b) Disconnect AC connector from PCBA.


(2) Wall mounting or Ceiling mounting




- (a) Knock out appropriate center cable entry hole and mounting screw hole on the mounting plate.

  Broute AC supply wire through center hole of mounting plate.
- © Fix mounting plate on the mount surface with screws and anchor nuts.


#### (3) Wiring connection Sultable cable 0.75-2.5mm<sup>2</sup>

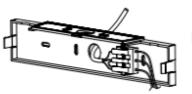

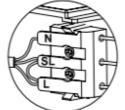

Connect the AC supply wire to terminal block. Refer to wiring instruction showed below.

#### (4) Connect battery

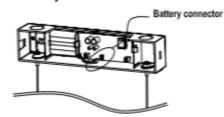


Connect battery male and female connector inside of mounting bracket.

#### (5) Change plctogram when necessary



Remove the pictogram on the unit, select other pictogram you need then insert into slot of panel.


#### (6) Finish installation

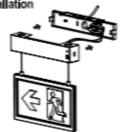

Snap AC supply on PCBA and then snap fixture to mounting plate.

## Wiring Instructions

## Maintained Wiring

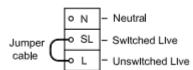


Maintained (default operation):

Connect L,N and leave jumper cable connected.

For switched maintained operation, disconnect the jumper cable and connect a switched live to 'SL' terminal.

#### Non-Maintained Wiring

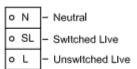


Non-maintained: Connect L,N and remove jumper cable.

## Mounting Options

Wall mounting

Ceiling mounting



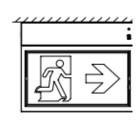

#### **DALI Wiring**

- LIVE

- SWITCH LIVE

o L1 οN

- NEUTRAL

o Da+

- DALI +

o Da-

- DALI -

#### **GENERAL INFORMATION**

- 1. A qualified electrician, in accordance with IEE wiring regulations, should carry out connection to mains wiring.
- 2. Ensure that the rated voltage and frequency requirements are compatible with the available mains supply.
- 3. Cleaning of reflectors and lenses should be carried out using clean, soft and lint free cloths and anti-static cleaning fluid.
- 4. Do not carry out high voltage insulation test, i.e. 500/1000v this may damage internal components.
- 5. Electrically isolate this luminaire during maintenance.
- 6. Replacing the light source within this luminaire shall only be carried out by the manufacturer, service agent or a similar qualified person.

#### **Specification**

Finish White.

Materials Polycarbonate Body

IP Rating IP40
Weight 0.5 Kg
Ambient Operating 0° to 45°

temp

Protection Class

Power Supply 220-240AC, 50/60 Hz

**TECHNICAL SUPPORT** 

Tel: 0161 331 5700

e-mail: technical@whitecroftlight.com

www.whitecroftlighting.com