

#### Wiring Diagrams

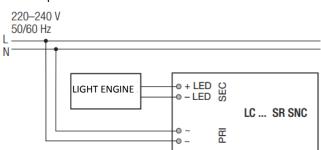




DALI Models

R

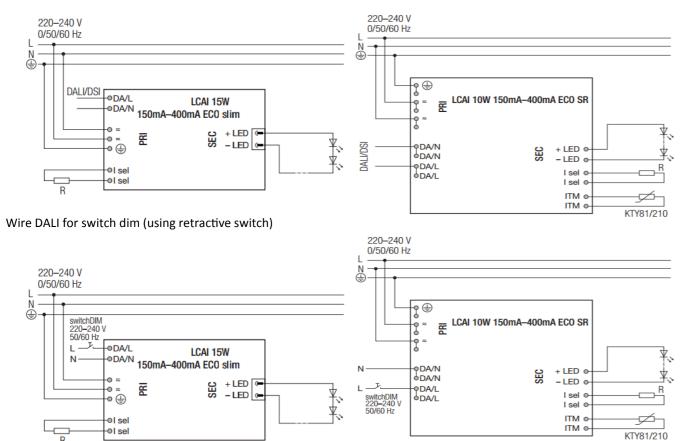

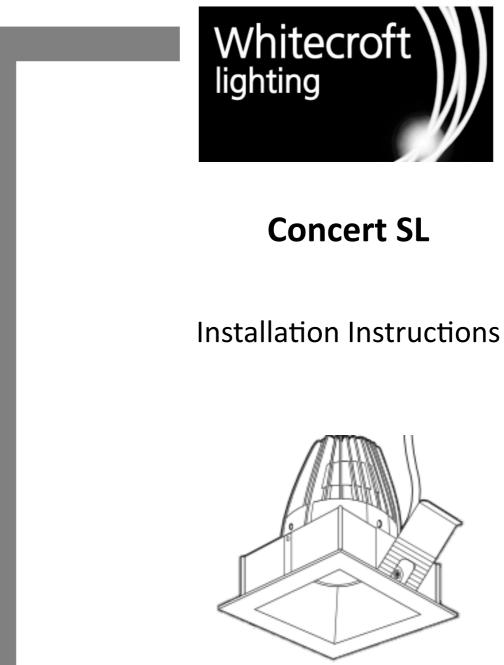

OCTOBER 2016 - REV B

## Whitecroft Lighting Limited

Burlington Street, Ashton-under-Lyne, Lancashire OL7 0AX Telephone +44 (0)870 5 087 087 Facsimile: +44 (0)870 5 084 210

Registered No. 3848973 England Registered Office: As above



Telephone: 0161 331 5700

E-mail: technical@whitecroftlight.com

http://www.whitecroftlighting.com/




990.0302.01

**IMPORTANT:** The luminaire must not be covered by any debris or insulating material. Ensure there is a minimum of 50mm airspace around the luminaire and control gear. Electrical termination must be carried out by a qualified electrician in accordance with the latest edition of the IEE wiring regulations BS7671.

#### PLEASE RETAIN THIS GUIDE FOR FUTURE REFERANCE AND RECYCLE PACKAGING.

#### **Product Specification**

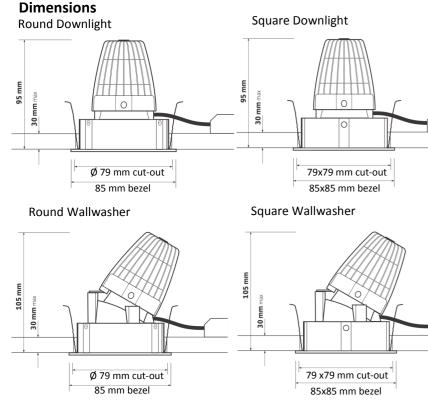

#### Specification

Lamp Type:- LED

Supply:-220-240V, 50-60Hz


Power Output:- 8W & 14W


Nominal Lumen Output:- 500 lm to 1000 lm

Colour Temperature: - 3000K & 4000K

**Ingress Protection:- IP44** 

Trim Colour:- RAL9003 Signal White

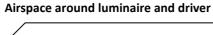

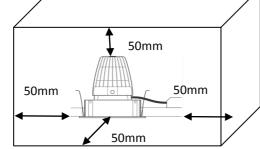

### **GENERAL INFORMATION**

1)A qualified electrician, in accordance with IEE wiring regulations should carry out connection to mains wiring.

2) Ensure that the rated voltage and frequency requirements are compatible with the available mains supply.

3) Cleaning of reflectors and lenses should be carried out using clean, soft and lint free cloths and anti-static cleaning fluid.

4) Do not carry out high voltage insulation test, i.e. 500/1000v this may damage internal components.





### \*A PATTRESS IS RECOMMENDED FOR CEILING THICKNESS LESS THAN 3mm .

Α Round—Cut a 79mm circular hole using a hole saw.

Square- Cut a 79mm square hole .

To avoid damage to the ceiling tiles it is not recommended to remove the luminaire once installed into soft ceiling types. The luminaire and driver can be maintained from the adjacent ceiling tile or by removing the whole tile with luminaire attached.

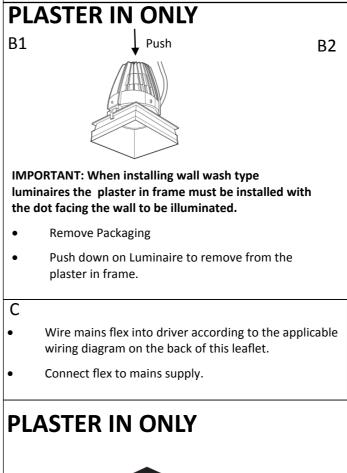

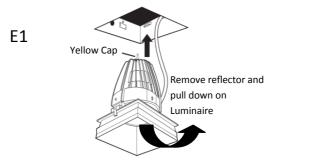


IMORTANT- Align dot on luminaire to dot on frame before attempting to lock fitting into place.

- Check the frame is clear of paint and plaster.
- Push the fitting into the frame. If there is a risk of the heatsink being covered insert the yellow cap into the top of the luminaire.

To remove luminaire for maintenance:-

Twist out reflector then pull down on luminaire

### Ceiling thickness:- MINIMUM 3mm\*, MAXIMUM 30mm

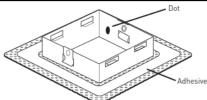

Apply a bead of quick drying grip adhesive to the rear face of the plaster in frame.

Locate into hole.

Secure frame into hole using plaster in screws (by others)

Once adhesive has cured apply PVA bonding coat and plaster up edge to frame.

Apply finish to ceiling and allow to dry. Plaster and paint must be dried completely before installing luminaire into plaster in frame. Otherwise this may invalidate warranty.

D




Feed the driver and control gear into ceiling void, ensuring it is not covered by debris or insulating material and is correctly positioned.

# METAL PAN / SOFT CEILING

## **TYPES\* / PLASTER BOARD**

E2

Yellow Cap

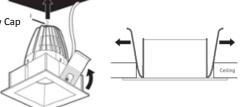

\*IMPORTANT :- To avoid damage to soft ceiling types care must be taken when releasing the spring into the aperture.

> Squeeze ceiling springs and push the fitting into the ceiling void. It is important that the springs are held from behind and only released once the luminaire is in place. If there is a risk of the heatsink being covered insert a yellow cap into the top of the luminaire.

Once in place make sure the luminaire is secure in the ceiling.