


INSTALLATION GUIDE:

LED DOWNLIGHT
990.0196.01

The luminaire must not be covered by any debris or heat insulating material.
Electrical termination must be carried out by a qualified electrician in accordance with the latest edition of IEE wiring regulations BS 7671.

IMPORTANT:

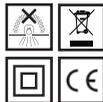

PLEASE RETAIN THIS GUIDE FOR FUTURE REFERENCE AND RECYCLE PACKAGING.

A **ISOLATE MAINS SUPPLY BEFORE COMMENCING INSTALLATION**

Ø80mm Single circular Ø85mm Single square 155mm x 80mm Double 235mm x 80mm Triple

Cut-out

- Cut out the appropriate hole at the required location using the illustration above as a guide.

B

N ← Blue
L ← Brown

- Connect the driver to the mains supply in accordance with the latest wiring regulations **BS 7671**.
- Secure the driver cover.

C

Hex key profile

- The gimbal can be secured at the desired angle using the hex key provided.

D

- Install the driver(s) into the ceiling void, ensuring it is not covered by any debris or insulating material.

E

- 1.
- 2.

- Retract fitting springs.
- Install the fitting into the cut-out.

REINSTATE MAINS SUPPLY

INSTALLATION GUIDE:

LED DOWNLIGHT
990.0196.01

The luminaire must not be covered by any debris or heat insulating material.
Electrical termination must be carried out by a qualified electrician in accordance with the latest edition of IEE wiring regulations BS 7671.

IMPORTANT:



PLEASE RETAIN THIS GUIDE FOR FUTURE REFERENCE AND RECYCLE PACKAGING.

A **ISOLATE MAINS SUPPLY BEFORE COMMENCING INSTALLATION**

Ø80mm Single circular Ø85mm Single square 155mm x 80mm Double 235mm x 80mm Triple

Cut-out

- Cut out the appropriate hole at the required location using the illustration above as a guide.

B

N ← Blue
L ← Brown

- Connect the driver to the mains supply in accordance with the latest wiring regulations **BS 7671**.
- Secure the driver cover.

C

Hex key profile

- The gimbal can be secured at the desired angle using the hex key provided.

D

- Install the driver(s) into the ceiling void, ensuring it is not covered by any debris or insulating material.

E

- 1.
- 2.

- Retract fitting springs.
- Install the fitting into the cut-out.

REINSTATE MAINS SUPPLY